


FREE 4x6 STATION PODIUM SETUP



I. POLE INSTALLATION



1. Insert pole into hole in back right corner of top shelf

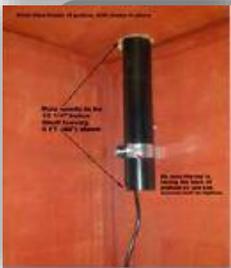

2. Pole should be 11 1/4" below shelf leaving 4FT (48") above shelf

II. FLASH SETUP



1. Insert open umbrella through hole in aluminum cone and through guide on flash body



2. Attach flash to top of pole using clamp

- Flash should point away from where consumer will have photo taken at 45 degree angle



3. Plug power cable into back of flash

- run power cable through pole and podium and plug into power strip



4. SYNC cable from wired transmitter on camera will plug into SYNC port on back of flash

FREE 4x6 STATION PODIUM SETUP

III. LAPTOP SETUP



1. Place laptop on top shelf of podium



2. Plug in laptop power cable (White)



3. Plug in USB hub (RED)

- Plug following items into USB HUB
- Printer (RED)
- Mouse (BROWN)



4. Plug in scanner (GREEN)

- Scanner should beep when it powers on




5. Plug in ethernet cable (GRAY)

- Sales Software will not function without ethernet cable connected



6. Plug in USB to camera cable (YELLOW)

IV. CAMERA SETUP

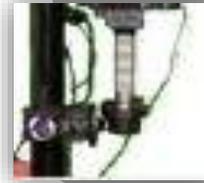

1. Attach pistol grip to pole

- Recommended height 10 inches above top shelf of podium



2. Attach camera to pistol grip



3. Plug in USB Camera cable (YELLOW)



4. Plug in remote shutter (ORANGE)



5. Plug in camera power (bottom of camera)

- Camera door must be completely shut or camera will not power on




6. Attach wired flash transmitter to camera hotshoe adapter

- plug SYNC cable into SYNC port on back of flash


FREE 4x6 STATION PODIUM SETUP

V. PRINTER SETUP

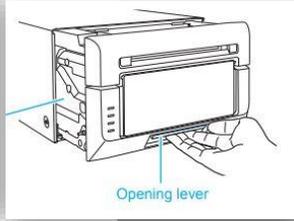


1. Open Printer

- Place printer on center of middle shelf of podium
- Plug in printer and power on (bottom right corner)
- Open front panel by pulling on front latch on the bottom front of printer

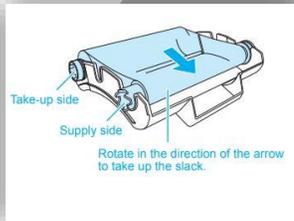

2. Installing Ink

- Remove ink ribbon tray from back of printer
- Insert ink ribbon tray. Be sure both spools are snapped into place. Ribbon should roll over the top.
- Slide loaded tray into printer using handle

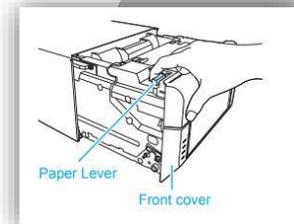


3.1 Installing Paper

- Push the blue, media release button on the left side of printer drawer. This will allow access to paper compartment




3.2 Installing Paper

- Remove the Scrap Box
- Pull straight up

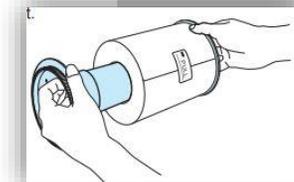


3.3 Installing Paper

- Insert new roll of media on black spools
- Make sure there is no space between paper and spool

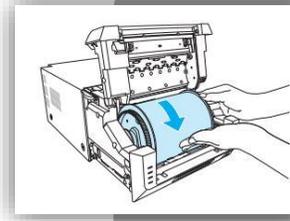


3.4. Installing Printer

- Paper should be rolled over the top with the end of the paper facing you
- Rotate the paper forwards until the printer beeps twice to confirm paper is properly loaded
- Printer MUST be ON when loading paper

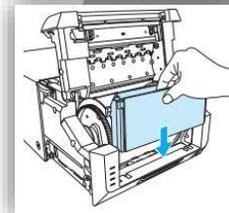


4. Replace Scrap Box

- Replace Scrap Box
- Do not operate printer without scrap box
- Be sure to dump scrap contents from scrap box before putting back on printer

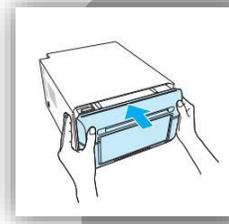

5 Close Printer

- Close the paper compartment
- Full close the printer media drawer
- Printer will cycle through lights and printer 5 blank test prints
- Printer is ready when only GREEN power light is on

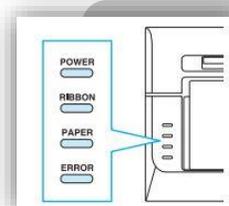

IMPORTANT PRINTER INFO

- Always change paper and ink at the same time
- Only use 4x6 paper and ink at Free Photo Station
- Only use 6x8 paper and ink at Sales Station
- If there is an issue with a box of media do not discard - contact PictureU technical Support for assistance
- Keep area around printer clear to allow air flow

PictureU Technical Support

855-719-8747

- Keep track of current inventory levels of media using media tracking sheets
- Contact PictureU when media supplies run low